




WO# 2014-47

Approved Manufacturing Facility 73-04

Form 20.F.06

Rev. Original 27 May 2013

1. Approving Civil Aviation Authority/Country Transport Canada		2. AUTHORIZED RELEASE CERTIFICATE FORM ONE			3. Form Tracking No.	
4. Organization Name and Address AERO Design Ltd. – 9888A Malaspina Road, Powell River, BC, V8A 0G3					5. Work Order/Contract/Invoice WO 2014-47	
6. Item	7. Description	8. Part Number	9. Qty.	10. Serial/Batch No.	11. Status/Work	
	Basket Assembly	94010-01	1	94001-08	New	
12. Remarks Basket WO2014-01, Lid WO2012-01						
13a. Certifies that the items identified above were manufactured in conformity to:			14a. <input type="checkbox"/> CAR 571.10 Maintenance Release <input type="checkbox"/> Other regulation specified in block 12			
<input checked="" type="checkbox"/> Approved design data and are in condition for safe operation. <input type="checkbox"/> Non approved design data specified in block 12.			Certifies that unless otherwise specified in block 12, the work identified in block 11 and described in block 12, has been performed in compliance with the Canadian Aviation Regulations.			
13b. Signature 		13c. Approved Organization Number AMF 73-04		14b. Signature		14c. Approved Organization Number
13d. Name Jeff Clarke - AD02		13e. Date (dd/mmm/yyyy) 28 Apr 2014		14d. Name		14e. Date (dd/mmm/yyyy)
<p align="center">Installer Responsibilities</p> <p>This certificate does not constitute authority to install.</p> <p>Installers working in accordance with the national regulations of a country other than that specified in block 1 must ensure that their regulations recognize certifications from the country specified.</p> <p>Statements in blocks 13a or 14a do not constitute installation certification. In all cases, the technical record for the aircraft must contain an installation certification issued in accordance with the applicable national regulations before the aircraft may be flown.</p>						

Blackcomb

General

These instructions apply to all cargo basket assemblies. Refer to the following drawings, at the current revision, for dimensions and details:

Bell 206L/407 – Right side only

69810, Revision 3 – Standard Low Mounted Basket
94510, Revision 0 – Extra-Wide Low Mounted Basket
94610, Revision 0 – Extra-Wide Low Mounted Ski Basket
76610, Revision 0 – High Mounted Ski Basket

Eurocopter AS350/AS355 – left or right

77610, Revision 1 – Short Basket
76410, Revision 3 – Medium Basket (left or right)
78410, Revision 2 – Long Basket
94010, Revision 0 – Extra Large (ski) Basket

Robinson R44 – left or right

90610, Revision 0 – Standard Basket (left or right)

Bell 206B – right side only

80210, Revision 0 – Short Basket
80310, Revision 0 – Medium Basket
81110, Revision 0 – Long Basket

Bell 429 – right or left

95911, Revision 0 – Standard Basket

Bell Medium – left or right

75111, Revision 0 – Standard Basket
95511, Revision 0 – Extra Large (ski) Basket

MD600

82811, Revision 0 – Standard Basket

Options

70405, Revision 3? – Lid Walkway

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

Work Order: 2014-47

Date Open: 10 Apr 14



1. Lid Assembly

- a. Install lid bumpers on bottom.
 - i. Fill bumper holes with RTV silicone sealant.
 - ii. Insert 49205-14 lid bumper, 3 or 4 places per lid.
- b. Install placard on bracket on top of lid.
 - i. Locate placard on bracket.
 - ii. Drill #30 through placard and bracket, using holes in placard.
 - iii. Remove placard and de-burr holes in placard and on bracket.
 - iv. Locate placard on bracket, and cleco in place.
 - v. Rivet placard with four CR3213-4-02 CherryMax rivets.
- c. Option: Install walkway on top of lid (lid must be fitted with walkway provisions)
 - i. Note: avoid touching surface of tread plate with bare hands to prevent smudges or marks on the top surface.
 - ii. Pull tread plate from stock. Shear tread plate to length.
 - iii. De-burr edges of tread plate with scotch-brite disc on die-grinder.
 - iv. Locate tread plate on lid. Hold tread plate in place with bags of lead shot.
 - v. Mark and drill #30 holes:
 1. 0.25" from edge of tread plate, centre on cross members (0.38")
 2. 0.25" from edge of tread plate, middle of each walkway stringer
 - vi. De-burr and counter-bore (if required to provide clearance of rivet head on checker pattern) all holes in tread plate using 1/4" piloted counter bore on both sides.
 - vii. De-burr holes in lid tubes.
 - viii. Apply bead of RTV silicone sealant along all tubes under tread plate.
 - ix. Set tread plate in place, secure with clecos if necessary.
 - x. Rivet placard with CR3213-4-02 CherryMax rivets
- d. Record PO/WO of all parts (including lid) used in steps above on attached material tracking list.

2. Body Assembly

- a. Install attachment fittings
 - i. Carefully remove excess powder coat from around attachment lug threads using a countersink.
 - ii. Run 3/8-24 tap into attachment lugs to clear threads.
 - iii. Apply anti-seize compound to attachment fittings 96710-01 (alternate: Ancra 40088-14)
 - iv. Install attachment fittings with two NAS1149F0363P washers in four lugs in basket.
 1. 90610 (Robinson R44) basket only:
 - a. Install 1 fitting 906?? in lower forward attachment lug only.
 - b. Install 3 96710-01 fittings in remaining locations.
 - v. Torque to ??



- b. 946 Basket Only: Install Cutout Brace – *must be completed after hinge installation*
 - i. Locate 94621-01 Brace over aft cross tube cutout
 - ii. Install two AN4-6A bolts and two AN4-30A bolts with NAS1149F0463P washers.
 - iii. Torque AN4 bolts to ??
- c. Record PO/WO of all parts (including basket) used in steps above on attached material tracking list.

3. Hinge Installation

- a. Prepare hinge.
 - i. Cut hinge to length:
 - 1. 776, 906 – 54"
 - 2. 751, 803 – 70"
 - 3. 698, 764, 945 – 72"
 - 4. 784 – 90"
 - 5. 940, 946, 959 – 95"
 - ii. Drill #30 pilot holes using hinge jig. For long hinges, flip at specified location on jig.
- b. Install hinge on basket
 - i. Locate hinge on basket (standard baskets)
 - 1. centre fore/aft
 - 2. 0.15" – 0.18" up from bottom edge
 - ii. Locate hinge on basket (extra wide baskets)
 - 1. centre fore/aft
 - 2. set hinge at 90 degrees (as if lid would be installed) using a small square, locate vertical side at 22.5" from outboard edge.
 - iii. Drill #30 through holes in hinge into basket rim. Cleco in place with 1/8 (copper) clecos.
 - iv. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 (black) clecos.
 - v. Remove hinge and de-burr holes in hinge and basket rim.
 - vi. Cleco hinge to basket with 5/32 clecos.
 - vii. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations
- c. Install lid on basket
 - i. Locate lid on hinge (all baskets)
 - 1. center fore/aft
 - 2. 0.15" – 0.18" down from top edge
 - ii. Drill #30 through holes in hinge into lid rim. Cleco in place with 1/8 clecos.
 - iii. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 clecos.
 - iv. Remove hinge and de-burr holes in hinge and lid rim.
 - v. Cleco lid to hinge with 5/32 clecos.
 - vi. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations

- d. Record PO of hinge and rivets on attached material tracking list.



4. Install Handle

a. Install handle brackets.

- i. Set 84267-01 handle bracket on provisions in hoops, 2 places.
- ii. Install AN3-11A bolt, NAS1149F0363P washer (2), MS21044N3 nut. Two places per bracket, two brackets per basket.
- iii. Torque AN3 bolts to ??.

b. Install handle

- i. Trim 36278-01R and 36278-01L springs to ensure end of spring does not extend past edge of handle bracket, approximately 1/8". Set springs over bushing of 84261-01 handle assembly.
- ii. Grease two 36275-01 bushings with ??. Insert into bushings of handle assembly.
- iii. Locate handle on basket lid. Insert AN3-12A bolt with NAS1149F0363P through bracket on lid and handle bushing on one end of handle.
- iv. On other end of handle, hook spring over catch rivet on handle assembly and use spring tool to twist spring to catch arm on bracket on lid while inserting AN3-12A bolt with NAS1149F0363P washer through lid bracket and handle bushing.
- v. At first end, remove bolt and repeat step iv.
- vi. Install NAS1149F0363P washer and MS21044N3 nut on both AN3-12A bolts.
- vii. Torque AN3 bolts to ??.

c. Check handle

- i. Operate handle to ensure handle does not bind and springs hold handle in.
- ii. Snap handle into brackets to ensure handle locks.

- d. Record PO/WO of all parts used in steps above on attached material tracking list.

5. Install lid brace



- a. Locate 36280-01 lid brace on bushing in basket. Ensure brace is on forward end of basket as it will be installed on the helicopter.
- b. On lid end, insert AN970-3 washer into end of lid brace. Insert AN3-15A bolt with NAS1149F0363P washer through AN970-3 washer, lid prop, and lid bushing. Install NAS1149F0363P washer and MS21044N3 nut on bolt.
- c. On basket end, insert AN3-17A bolt with AN970-3 washer through lid prop and basket bushing. Install NAS1149F0363P washer and MS2144N3 nut on bolt.
- d. Ensure brace is seated on lip of bushings before tightening nuts.
- e. Torque AN3 bolts to ??
- f. Record PO/WO of all parts used in steps above on attached material tracking list.

6. Final Inspection

Dual inspection by a different person than assembled the basket.

- a. Check for general condition and correct assembly:
 - i. Bolts are tight
 - ii. Rivets are installed correctly
 - iii. Handle operates correctly
 - iv. Lid brace operates correctly
- b. Check that PO/WO numbers have been recorded.

Work Order: 2014-47

Material Tracking Sheet
Eurocopter AS350 / AS355
Extra Large Basket Assembly

1 of 2

Date Opened: _____

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
			94010-01	Cargo Basket Assembly		
Step 1				<i>Lid Assembly</i>		<i>Existing</i>
	. 1		94012-01	Basket Lid Assembly		
Step 1.a.	. . 4		49205-14	Bumper	Argus Industries Bumper	
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 1.b.	. . 1		94027-01	Placard	0.063 Sheet, 6061-T6 Aluminum	
	. . 4		CR3213-4-02	Cherry Rivet		
Step 1.c.	. 1		70405-01	Lid Step Modification		
(option)	. . 1		70405-04	Tread Plate	3003 Aluminum Tread Plate, 0.063"	
	. . A/R		CR3213-4-02	Cherry Rivet		
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 2				<i>Basket Assembly</i>		
Step 2.a.	. 1		94011-01	Basket Body Assembly		<i>2014-01</i>
	. . 4		96710-01	Fitting	Alternate: Ancra 40088-14	
	. . 8		AN960-616	Washer		
Step 3				<i>Hinge Installation</i>		<i>Existing</i>
	. 1		MS20001P4	Piano Hinge	95"	
	. 8		CR3523-5-02	Cherry Rivet		<i>13026</i>
	. A/R		CR3213-5-02	Cherry Rivet		<i>13026</i>
Step 4	. 1		84255-01	<i>Handle Installation</i>		<i>Existing</i>
Step 4.a.	. . 2		84267-01	Bracket	Delrin, 3/4" Sheet	
	. . 4		AN3-11A	Bolt		
	. . 8		NAS1149F0363P	Washer		
	. . 4		MS21044N3	Nut		

Work Order: _____


Date Opened: _____

Material Tracking Sheet
Eurocopter AS350 / AS355
Extra Large Basket Assembly

2 of 2

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 4.b.	.. 1		84261-01	Handle Assembly		<i>Existing</i>
	.. 2		36278-01	Spring (1 left, 1 right)	304 Stainless, 1/16" Dia Music Wire	
	.. 2		36275-01	Bushing	Brass, 5/16" Dia	
	.. 2		AN3-12A	Bolt		
	.. 4		NAS1149F0363P	Washer		
	.. 2		MS21044N3	Nut		
Step 5				<i>Lid Brace Installation</i>		<i>Existing</i>
	. 1		36280-01	Brace Assembly		
	. 1		AN3-15A	Bolt		
	. 1		AN3-17A	Bolt		
	. 2		AN970-3	Washer		
	. 3		NAS1149F0363P	Washer		
	. 2		MS21044N3	Nut		
Step 6				<i>Inspection</i>	<i>None</i>	

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	UPDATE TITLE BLOCK; ADD ALTERNATE REVIEWS; HARDWARE P/AS UPDATED; CHANGE PRACE ASSEMBLY TO INSTALLATION	BUC	16/07/77

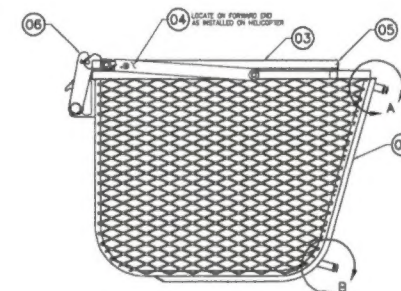

DETAIL B
SCALE 1 : 3
TYPICAL FRONT AND REAR



DETAIL C

SCALE 1 : 1

LOOKING AT PLACARD BRACKET

NOTE:
1. ALL DIMENSIONS SHOWN ARE FOR REFERENCE ONLY. DIMENSIONS OF COMPONENT AND COMPLETE ASSEMBLY ARE DETERMINED IN PREVIOUS STEPS.

[illegible][illegible]